

### C6 SKID PLATE WHEEL INSTRUCTIONS

1. Start by removing wheels from the skid plate wheel assembly.
2. Put the silver bolt back into the skid plate wheel bracket and hand tighten.
3. Hold the skid plate bracket in place as shown in figure 1 and mark the two holes.
4. Drill 5/16 holes on your marks making sure you drill all the way through as shown in figure 2.
5. Now you are ready to install the skid plate assembly. We recommend using lock tight to ensure the bolts from becoming loose. Shown in figure 3.
6. Then repeat the same process for the other side.



Figure 1



Figure 2

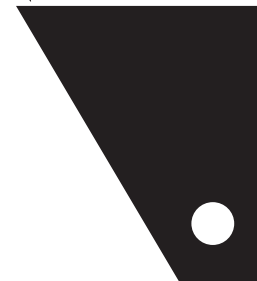


Figure 3



Finished

← Towards Front of Car



If you have any further questions you can call us at: 888.737.8377

1210 N. Kraemer Blvd. Anaheim, CA 92806 / [www.westcoastcorvette.com](http://www.westcoastcorvette.com)