

SALES • COMPLETE SERVICE • PARTS • TOLL FREE: 1.888.737.8388 • FAX: 1.714.630.1422

### **INSTRUCTION FOR A6 PADDLE SHIFTER MOD.**

Tools you will need will be a 20 Torx head screw driver and a small flat head screw driver or Phillips with the shaft at least 6 inches long.

Before you get started as with most projects disconnect the battery for safety.

1. First thing to do is remove the center air bag assembly. That is done by using a small screw driver to release 2 metal slides on the inside of the wheel. You can do this by inserting the screw driver into the 2 small holes on either side of the steering wheel and carefully pushing back the metal rods to release the 2 pins that hold the air bag assembly on the wheel. It's a bit tricky at first but when you look at the pictures and see what you need to do to release the pins It will make it much easier. (figure 1 - 3)

2. Once you pop the assembly free you can rest it on the top of the wheel to keep it out of the way. (figure 4)

If you have any further questions you can call us at: 888.737.8388

**1210 N. Kraemer Blvd. Anaheim, CA 92806 / [www.westcoastcorvette.com](http://www.westcoastcorvette.com)**



Figure 1

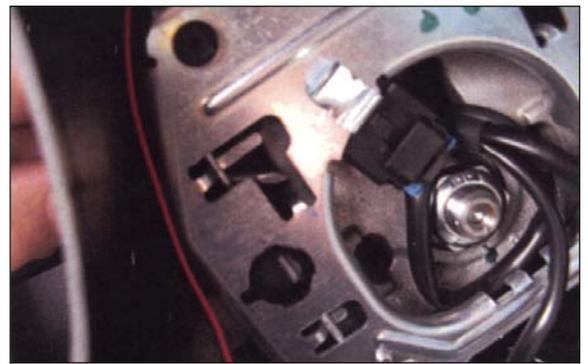


Figure 2



Figure 3



Figure 4

3. Take the 20 torx and remove the 1 screw that hold the plastic cover on the left side of wheel that covers the module. (figure 5)

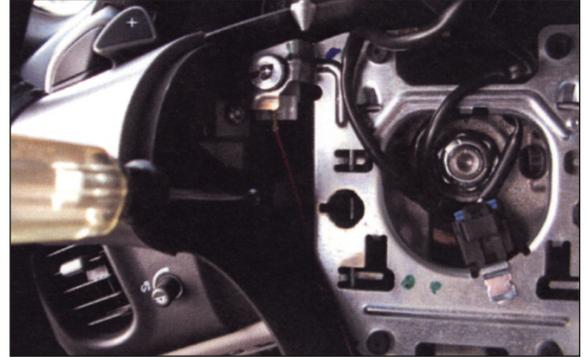


Figure 5

4. Then you will see 2 more 20 Torx screws that holds the module to the wheel. Remove those and you can now pull out the module. (figure 6)

Unclip the module and replace with supplied one. (figure 6)



Figure 6

5. Reinstall the module and plastic cover. The air bag assembly will just pop back into place and you are now done. (figure 7)

Now go enjoy the car and shift it the way it should be....The right side of the wheel will be the upshift side and the left side will be the downshift. (figure 7)



Figure 7

If you have any further questions you can call us at: 888.737.8388

**1210 N. Kraemer Blvd. Anaheim, CA 92806 / [www.westcoastcorvette.com](http://www.westcoastcorvette.com)**