


## C6 Corvette - RaceMesh™ Precision Grille Lower Intake installation instructions (Pop-Off Sleeve use)

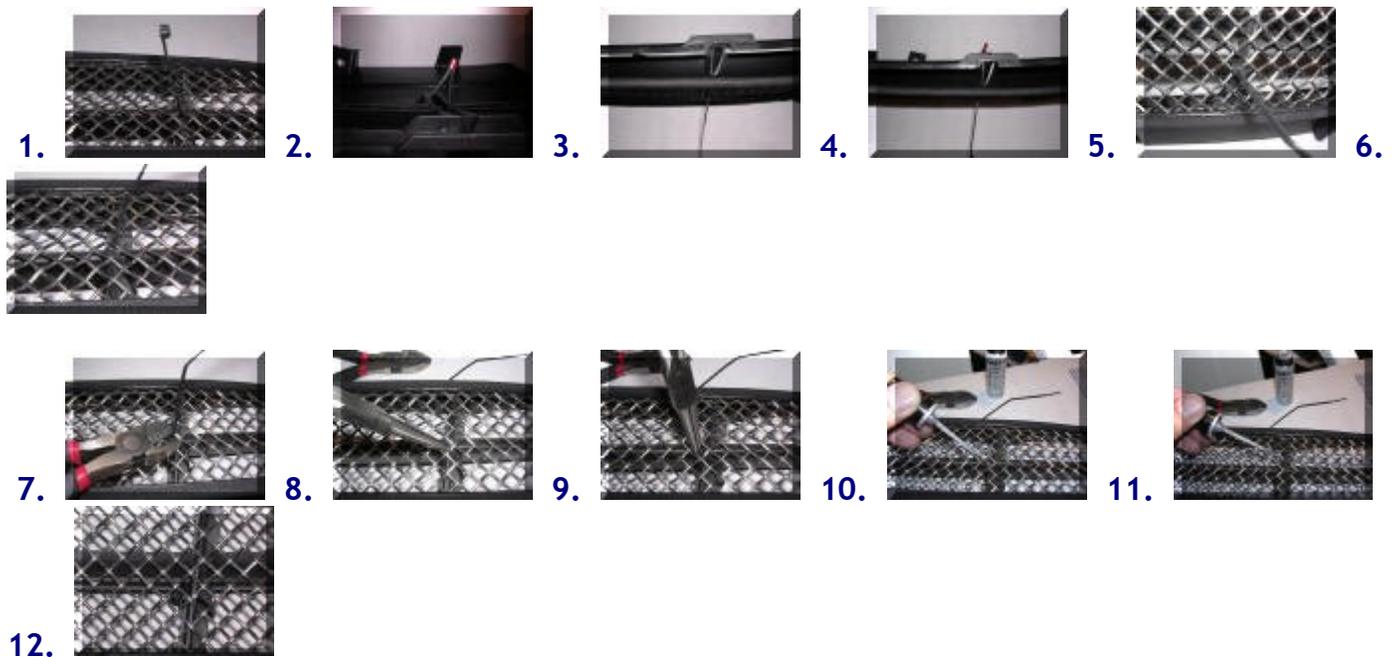

NOTE: Place the RaceMesh unit into the opening, select a location to thread the zip-tie through where the RaceMesh wire and the OEM plastic grid best lines up. Thread the zip-tie through and around both the RaceMesh and OEM grille as pictured, then pull both ends of the zip-tie until the Pop-Off Sleeve pops off, then secure the zip-tie. Repeat for each zip-tie location that you have selected. Cut off zip-tie leaders, tuck each knuckle behind RaceMesh so only the thin zip-tie is showing. Optional: A dab of silver touchup paint on the zip-tie where it overlaps the RaceMesh will completely conceal the zip-tie.

## C6 Corvette - RaceMesh™ Precision Grille Fender Ducts installation instructions



**Step One:** (optional - remove wheel) Remove fasteners with forked screwdriver, and 3 screws from bottom of wheel well panel.

**Step Two:** Detach two contact points (bonded by double sided tape) of inner fender liner and push toward engine and secure it with masking tape to keep it out of the way while working on the application area. We used blue painters tape for this purpose as seen in pictures 5 & 6.

**Step Three:** Clean the inner fender around the duct and then go over the area with rubbing alcohol to insure a clean surface so the tape/epoxy has a clean surface to adhere to.

**Step Four:** Place the appropriate (notice that each is labeled) RaceMesh Precision Grille Fender Duct over the application area and secure with double sided 3M tape as shown or use a 5-minute Epoxy in place of or in addition to the tape.

**NOTE:** We prefer a combination of a few small 3M tape contact points (to position and tack the RaceMesh) and 5-minute Epoxy for a more secure permanent fabrication.