

BRAKE PAD COVER SET


1997-2006 CORVETTE INSTALLATION INSTRUCTIONS

1. Using a scraper or putty knife remove the shim plate on the back of the front and rear outer brake pads.
2. Then grind the Tabs shown in the pointing arrows, flush with the back of the brake pad.
3. Peel protective film from shinny side of reflectors.
4. Install your new covers on the outside of each outer brake pad.

LARGE: Front Reflector



SMALL: Rear Reflector

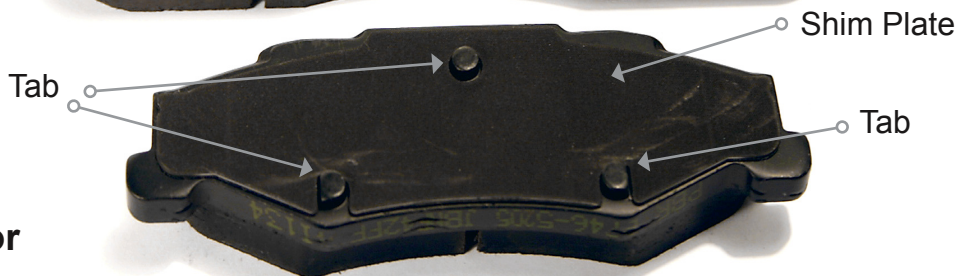

1031 S. Melrose St. • Placentia CA 92870
Tel: 714-630-6396 • Fax: 714 630-1422 • Toll Free: 1-888-737-8388
www.westcoastcorvette.com

DISCLAIMER NOTICE: West Coast Corvette assumes no responsibility for any damages caused by improper installation or part failures. This information and procedure is provided as a courtesy and is for informational purposes only. You assume all risks associated with the use of this information. Any type of modification or service work on your vehicle should be performed by a qualified mechanic. If performed incorrectly, this procedure may endanger the safety of you and others in your vehicle and possibly void your manufacturer's warranty.