



SALES • COMPLETE SERVICE • PARTS • TOLL FREE: 1.888.737.8388 • FAX: 1.714.630.1422

2005 - 13 C6 Quick Release Front Plate Frame

Important Instructions, Please Read Before Installation:

Parts List: Mounting bracket, Removable plate frame, Cross brace, 2 Fender washers, Nylock nut, 2 #8 Hex drive screws 1 1/2", 2 Plate mount screws 1/4" 20 x 1/2"

Tools needed: 1/4" Drive ratchet, 1/4" Short extension, 7mm Socket, 1/4" Socket, Flat blade screwdriver, 3/8" Open end wrench, Pliers

Installation: Jack up car and place on jack stands in such a manner to gain easy access to the bottom of the front bumper. Refer to user's manual for correct jacking procedure.

With the 7mm socket and short extension remove and save the 7mm bolt at center back of cooling opening. Remove the U-nut from the upper black section of the fascia by prying with the screwdriver and pulling with the pliers. Re-install the U-nut on the slotted portion of the mount bracket.

Reaching inside the bumper fascia from the cooling opening find the two 7mm bolts directly behind the grill and approximately 3" either side of center and remove and set them aside. (They will be reused.) Take the mounting bracket and carefully angle it up into the fascia from cooling opening. By angling and rotating the bracket at the indentation where the 7mm bolt was the bracket will go up and inside the cooling area.

Reaching inside the cooling area with the cross brace, place cross brace on mount bracket stud. Place the nylock nut on the stud and tighten with the 3/8" open end wrench. Place the completed mount bracket in its location centered on the grill.

Insert the 7mm bolt in the rear center location. Install the 2 fender washers on the #8 screws. Install the #8 screws through the cross brace in the place of the 7mm bolts in the area behind the grill. Push bracket all the way forward and tighten all 3 screws. Insert the plate frame into the mount bracket. Check assembly for clearance and alignment. Reposition if needed.


Lower car off jack stands.

Insert your license plate into the plate frame and install the 1/4" 20 screws into the lower two holes in the plate frame.

Installation is now complete

Use: The plate frame is easily removable when appropriate, such as for car shows, photo shoots, and racing. Simply pull on the frame in a straight and forward motion and it will pop loose.

To replace the plate frame, insert the longer alignment pins in the lower connection point. Push the plate straight into the mounting bracket until all four pins are completely in. Verify this either by feel or visually. **Verification is important to prevent inadvertent loss of the plate frame.**

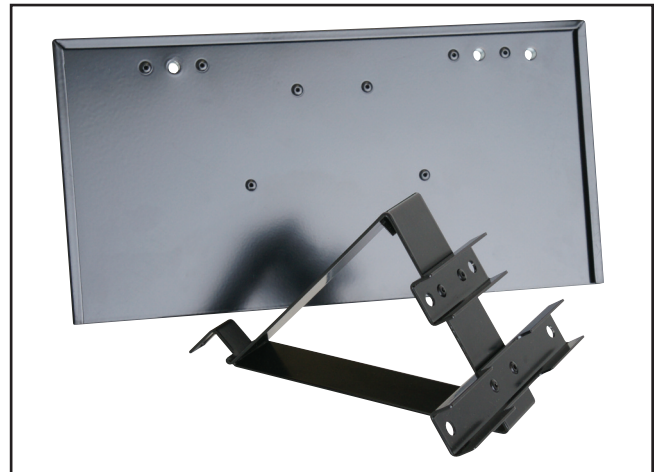

If you have any further questions you can call us at 888-737-8388

1210 N. Kraemer Blvd. Anaheim, CA 92806 / www.westcoastcorvette.com

35120040 C6FastOnLicense