

C6 & C6 Z06 Exhaust Plate Instructions

**Important Instructions,
Please Read Before Installation:**

TOOLS NEEDED:



- 13mm Wrench
- 10mm Socket and Swivel
- 1/4" Extension (6" Long)



PARTS INCLUDED:

- 1-Exhaust Plate
- 2-Brackets
- 2-Bolts and 2-Nuts

1. Loosen 13mm muffler hanger bolt (pic 1).
2. Remove 10mm bumper support bracket bolt (pic 2).
3. Attach brackets. Bracket position: Small portion with hole should be in the center of the exhausts and toward the cans (pic 3). Long portion of bracket goes over muffler bushing (pic 4). Return bumper support bolt (bumper support bolt goes thru bracket) and snug (pic 4).
4. Repeat process for other side. Brackets should meet in the center (pic 5).
5. Attach exhaust plate, tighten all nuts and bolts (pic 6).

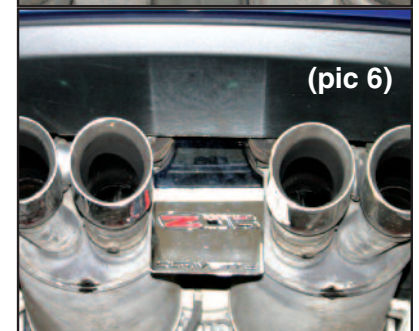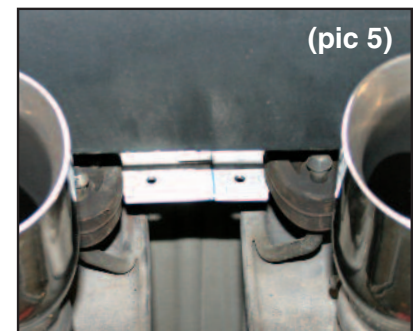

If you have any further questions you can call us at 888-737-8388

1210 N. Kraemer Blvd. Anaheim, CA 92806 / www.westcoastcorvette.com