

C6 Painted Rear Spoiler

INSTRUCTIONS

Preparation: Your package should contain all the pieces contained in figure 1. (Except tools).

You will need a 10mm wrench, a Torx T15 screwdriver, and a 4mm stud ratchet for installation.

Step One: With your Torx T15 screwdriver, remove the innermost right hand side taillight as shown in figure 2.

Step Two: With your 10mm wrench, reach inside the tail light hole and remove (4) 10mm nuts that are attached to the stock spoiler. (See figures 3 and 4). Disconnect the electrical connection to the center tail light.

Step Three: After the 10mm nuts are removed from the stock spoiler, carefully pull the stock spoiler away from the trunk panel. (See figure 5).

Step Four: Using your 4mm stud ratchet, remove the two center screws from the underside of the stock spoiler to release the stock center tail light. (See figures 6 and 7).

Figure 1

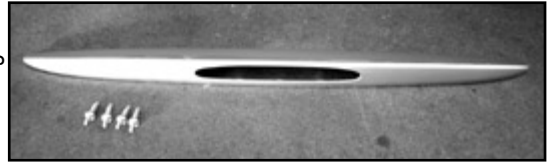


Figure 2



Figure 3



Figure 4



Figure 5

Figure 6



Figure 7

C6 Painted Rear Spoiler **INSTRUCTIONS** (Continued)

Step Five: Insert stock center tail light into new painted spoiler housing. (See Figure 8)

Step Six: Using 4mm stud ratchet, secure new screws (4) into painted spoiler housing, securing the center screws first for the center tail light and then the outer screws (See figure 9).

Step Seven: Carefully fit new spoiler into trunk panel. Reach into tail light hole and re-secure stock 10mm nuts and re-attach electrical wiring for center tail light. Re-attach innermost right hand side tail light

Figure 8



Figure 9



Finished Spoiler

