

C5 / C6 Fender Duct Screen Installation

INSTRUCTIONS

NOTE: These photos are taken with the wheel off in order to get a better view of the inner panels. Though recommended, it is not necessary to remove front wheels. Position wheels at maximum angles to reach inner fender panels.

*These Photos are shot with a C6 Corvette.

C5 Required Tools: 7mm socket wrench, rubbing alcohol

C6 Required Tools: 10mm socket wrench, forked screwdriver and rubbing alcohol

Step One: With 7mm socket wrench, remove all screws from the wheel well panel. (C6 remove fasteners with forked screwdriver) (see figure 1-2).

Step Two: After you remove this plastic piece, (see figure 3) lift the fender panel and clean the inner fender around the cowl vent and then go over the same area with some rubbing alcohol to insure that there is no dirt or grease. This will ensure that the adhesive tape has a clean surface to stick to.

Step Three: Notice that the screens are labeled left and right. Before removing the red plastic on the 3M tape, fit the screen into place so you know right where it is going to install. If you do not do this, the tape is very difficult to remove and re-stick if an alignment mistake is made.

Step Four: When ready, remove the red plastic from the tape and press the acrylic block that is on the screen and from the outside, press the fender where the block is. Then take the 2 acrylic strips and remove the red plastic from the tape and place them as shown (see figure 4) so that the screen remains pressed up to the small edge of the vent.

Figure 1

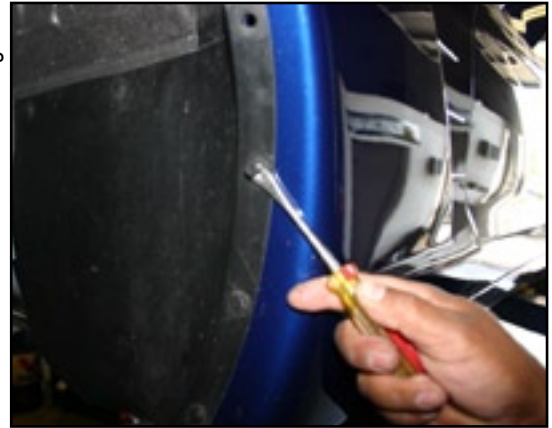



Figure 2



Figure 3



Figure 4

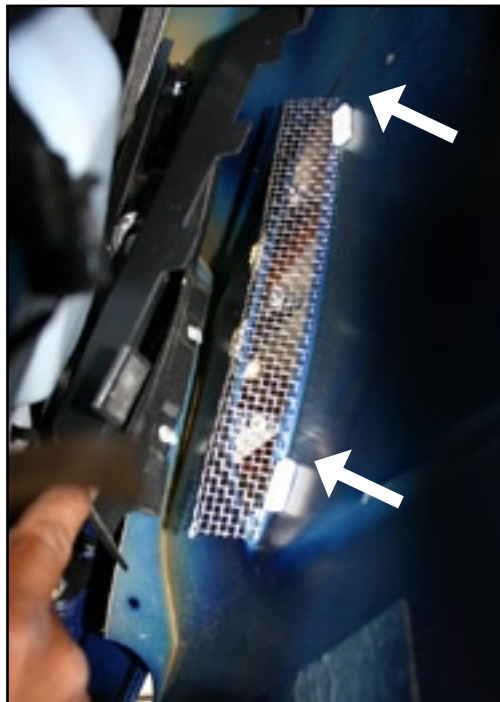

C6 Finished Screen



C5 Finished Screen